

Esit PWI-P indicator calibration

Power off the indicator and then power on it or press (TEST) once.
The led will show follows.

8.8.8.8.8.8.

[- - - -]

VER-4.2


ESIT

After seeing ESIT press  then will show


LCtEST

Press  then will show


SETUP


Press  again and will show

Coññ


Press  again and will show

CALibr


To enter calibration press  once. The led will show inspecting rate

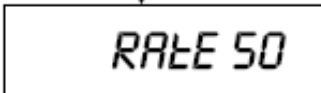

To continue without changing press  once. The led will show gain value

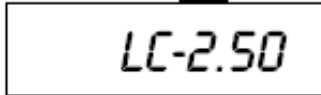


To continue without changing press  once. The led will show 2-3 seconds

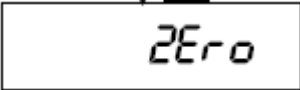

And will show incouting value. (NOTE: This value is NOT in KG.)

To save zero value press  once. The led will show 2-3 seconds.

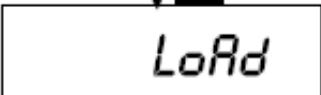

And will show incouting value. (NOTE: This value is NOT in KG.)

Load the Weight to the Scale. After avoiding vibration to enter the weight value press

. To increase the current value press , to pass a new place press ,

to Reset the value press  and to save the value press .

PLEASE AVOID ANY VIBRATION WHILE WEIGHTING.

The indicator will make some test and will show the weight you loaded.